

#### 此用户手册适用 HPM6750 系列高性能微控制器:

HPM6750IVM1、HPM6730IVM1 HPM6450IVM1、HPM6430IVM1 HPM6120IVM1、HPM6110IVM1 HPM6758IVM1



長日

第一	·章	HPM67	/50EVKMINI 简介	4
笛一	· 辛	面供由國		6
<del>भ</del> -	·早 -上 #4			0
2.1	电路	<b>授</b>	绍	6
		2.1.1		6
		2.1.2	电源	7
		2.1.3	SDRAM	7
		2.1.4	FLASH	7
		2.1.5	LCD 接口	7
		2.1.6	CAM 接口	7
		2.1.7	USB 接口	7
		2.1.8	TF 卡接口	7
		2.1.9	WIFI 接口	8
		2.1.10	DEBUG	8
		2.1.11	按键	8
		2.1.12	BOOT 拨码开关设置	8
		2.1.13	电池座	8
		2.1.14	 扩展 IO 接口	8
笛口	音			11
까 > 4	·平· 左本 /			
3.1	间1	••••		11
3.2	环境	制及依	赖	11
3.3	开发	江具.		11
3.4	sdk	_env/S	egger Embedded Studio For RISC-V 使用快速指南 .....................	11
3.5	更新	f sdk_e	nv 中的 SDK/toolchain 指南....................................	19
		3.5.1	更新 sdk env 中的 SDK ...................................	19
		3.5.2	更新 sdk_env 中的 toolchain....................................	19
第四	章	RT-Thr	ead Studio 快速上手指南	21
4.1	简介	• • • •		21
4.2	环境	制及依	赖	21
		4.2.1	安装板级支持包	21
		4.2.2	安装编译器工具链	22
		4.2.3	安装调试器支持包	22

## HPM6750

HPM6750EVKMINI

4.3	新建	工程。			 •		 		•	•					 •		•	•			•	•	 •	•		-			•		•				23
4.4	编译	和调试					 																 •			-									23
		4.4.1	编	译																							 -								24
		4.4.2	调	试												•																			24
4.5	已知	口限制/问	题	• •	 •	•	 		•	• •	 •		•	•	 -	•	•	•	 •	•	•	•	 •	•	•	•		•	•	• •	•	• •	•	•	25
第五	章	版本信	息																																26
第六	章	免责声	明																																27

目录



## 表格目录

1.1	主要器件位号对应器件功能名称	5
2.1	启动配置表	8
2.2	P1 连接器列表	9
2.3	P2 连接器列表	10
5.1	版本信息	26



## 图片目录

1.1	顶层器件位置图	4
1.2	底层器件位置图	4
2.1	HPM6750EVKMINI 硬件设计框图	7
3.1	安装 FTDI 驱动	12
3.2	查看 Windows 设备管理器	13
3.3	打开 sdk prompt	13
3.4	构建目标板工程	14
3.5	构建目标板 flash_xip 工程....................................	15
3.6	generate_project 帮助	15
3.7	Segger Embedded Studio 打开 hello_world 工程	16
3.8	Segger Embedded Studio 编译 hello_world 工程	16
3.9	Segger Embedded Studio 调试 hello_world 工程	17
3.10	Segger Embedded Studio 配置串口	17
3.11	Segger Embedded Studio 打开串口	18
3.12	Segger Embedded Studio 运行 hello_world	18
3.13	更新 SDK	19
3.14	拷贝 toolchain	20
3.15	更新 start_cmd.cmd 中 TOOLCHAIN_NAME .....................	20
4.1	安装 HPM6750EVKMINI 板级支持包	21
4.2	安装 RISC-V GCC 工具链	22
4.3	安装 OpenOCD-HPMicro 调试器支持包	23
4.4	创建新的 RT-Thread 工程	23
4.5	编译新的 RT-Thread 工程....................................	24
4.6	RT-Thread 启动信息....................................	24
4.7	运行 RT-Thread 工程	25



# 第一章 HPM6750EVKMINI 简介



HPM6750EVKMINI 板的器件位置如图 1.1,图 1.2。表 1.1给出了器件位置对应器件的名称。

图 1.1: 顶层器件位置图



图 1.2: 底层器件位置图

序号	名称	序号	名称
1	HPM6750	2	SDRAM
3	FLASH	4	DEBUG 芯片
5	USB 输出保护芯片	6	DAO 接口
7	LCD 连接器	8	CAM 连接器
9	电池座	10	蜂鸣器
11	PBUTN 按键	12	WBUTN 按键
13	RESET 按键	14	DEBUG TYPC 接口
15	USB0 TYPC 接口	16	5V 电源输入接口
17	BOOT 配置拨码开关	18	三色状态指示灯
19	DCDC 芯片	20	24MHZ 晶体
21	<b>32.768K</b> 晶体	22	数字功放
23	扩展接口 P1	24	扩展接口 P2
25	WIFI 模块	26	TF 卡插座

表 1.1: 主要器件位号对应器件功能名称



## 第二章 硬件电路

HPM6750EVKMINI 电源适配器供电不能超过 5.5V,如超过会可能会损坏板上器件。I/O 接口是 3.3V 电平,如外接其他设备,需确保电平匹配。如不匹配可能导致不能正常工作或损坏芯片。

## 2.1 电路模块介绍

#### 2.1.1 系统架构

HPM6750EVKMINI 系统架构如如图 2.1。



#### 图 2.1: HPM6750EVKMINI 硬件设计框图

#### 2.1.2 电源

HPM6750EVKMINI 具有多种供电方式,可以选择通过任意 USB Type C 或 5V 电源适配器接口来为整板供电。当系统外接 7 寸 LCD 屏时,由于背光耗电比较大,有可能单一 Type C 的 USB 接口供电不足,此时需要接多个 USB 接口供电或者使用 5V 电源适配器接口为整板供电。板上提供板载纽扣电池 CR1220 接口,为 MCU 电池备份域供电。

#### 2.1.3 SDRAM

U9 是 HPM6750EVKMINI 板上的 SDRAM 器件, 16 位数据线, 容量 256Mb, 时钟速度 166MHz, 封装 BGA (8mmx8mm)。型号 IS42S16160J-6BLI。

#### 2.1.4 FLASH

U8 是 HPM6750EVKMINI 板上的 NOR FLASH 器件,4 位数据线,容量 64Mb,时钟速度 104MHz,封装 SOP8 208mil。型号 IS25LP064A-JBLE。

#### 2.1.5 LCD 接口

J5 是 HPM6750EVKMINI 板上的 LCD 接口,通过该接口实现显示功能。板上不提供背光功能,背光电路需要在接口板上实现。我们有配套 LCD 屏子板供应。若自己选配 LCD 屏,请参照原理图确认屏的接口信号定义,需要严格匹配,否则导致 PCBA 或屏的损坏。

#### 2.1.6 CAM 接口

J6 是 HPM6750EVKMINI 板上的 CAM 接口,通过该接口实现 CAM 的图像传输功能。直接支持 OV7725 和 OV5640 模组。如果接其他 CAM 模块,先确保信号和电源接口跟原理图相匹配。

#### 2.1.7 USB 接口

J3 是 HPM6750EVKMINI 板上的 USB 接口,连接器类型是 Type C。支持 USB 2.0 OTG。

### 2.1.8 TF 卡接口

U12 是 HPM6750EVKMINI 板上的 TF 卡接口。



#### 2.1.9 WIFI 接口

U17 是 HPM6750EVKMINI 板上的 WIFI 模块。通过 SPI 接口访问。

#### 2.1.10 DEBUG

J4 是 HPM6750EVKMINI 板上的 DEBUG 接口,连接器类型是 Tpye C。通过 U7:FT2232HL 实现 USB 到 JTAG 和 UART 的转换。用户只需要连接 USB 接口即可访问芯片 JTAG 接口和 UART0 接口。

#### 2.1.11 按键

S2、S3、S4 分别是 EVK 板上对应的 PBUTN、WBUTN、RESET 按键。

用户通过 PBUTN 按键实现对 MCU 内部的电源进行管理。当系统处于运行状态时,PBUTN 上检测到一次有效的超长按键(输入保持低电平约 16 秒),就会指示电源管理系统关闭电源管理域的各个电源,使系统休眠状态。

用户通过 WBUTN 按键实现对 MCU 的唤醒。当系统处于掉电状态时,唤醒按键 WBUTN 上检测到一次有效的按键(输入保持低电平约 0.5 秒),可以重新打开电源域 VPMC 里的各个电源,使系统重新工作。

用户通过 RESET 按键对 MCU 进行外部复位。

#### 2.1.12 BOOT 拨码开关设置

芯片默认是通过 S1 拨码开关设置对应 BOOT\_MODE[1:0]=[PZ07:PZ06] 引脚选择启动模式,配置如表 2.1。

S1 拨码开关 [1:0]		启动模式	说明				
OFF	OFF	XPI NOR 启动	从连接在 XPI0/1 上的串行 NOR				
			FLASH 启动				
OFF	ON	串行启动 UART0/USB-HID	从 UART0/USB0 上启动				
ON	OFF	在系统编程(ISP)	从 UART0/USB0 上烧写固件,OTP				
ON	ON	保留模式	保留模式				

表 2.1: 启动配置表

### 2.1.13 电池座

BT1 是 HPM6750EVKMINI 板上的电池座,对应电池型号 1220,电压 3V。

### 2.1.14 扩展 IO 接口

扩展 IO 接口包括 P1、P2 两个连接器接口。P1 与树莓派是兼容,并且在树莓派基础上,还增加了 CAN 复用 功能。P1、P2 的信号列表如表 2.2和表 2.3。



#### HPM6750 HPM6750EVKMINI

引脚名	功能名	连接器	醫编号	功能名	引脚名
	3.3V	1	2	5.0V	
PB13	I2C3.SDA	3	4	5.0V	
PB14	I2C3.SCL	5	6	GND	
PE25	PE25	7	8	URT13.TXD	PZ09
	GND	9	10	URT13.RXD	PZ08
PE26	PE26	11	12	I2S0.BCLK	PF06
PB11	I2C0.SCL	13	14	GND	
PB10	I2C0.SDA	15	16	PE29	PE29
	3.3V	17	18	URT14.TXD	PZ11
PB22	SPI2.MOSI	19	20	GND	
PB25	SPI2.MISO	21	22	URT14.RXD	PZ10
PB21	SPI2.SCLK	23	24	SPI2.CSN	PB24
	GND	25	26	PF0	PF0
PF1	PF1	27	28	PF2	PF2
PB27	PWM0.P4	29	30	GND	
PF4	PF4	31	32	PWM0.P5	PB26
PE28	URT6.TXD	33	34	GND	
PF09	I2S0.FCLK	35	36	URT6.RXD	PE27
PF03	I2S0.MCLK	37	38	I2S0.RXD1	PF05
	GND	39	40	I2S0.TXD1	PF07

#### 表 2.2: P1 连接器列表

引脚名	功能名	连接器	醫编号	功能名	引脚名
	3.3V	1	2		
PE14	ETH1.TXEN	3	4	3.3V	
PE19	ETH1.TXD0	5	6	GND	
PE31	CAN1.TXD	7	8	ETH1.TXD1	PE17
	GND	9	10	CAN1.RXD	PE30
PE21	ADC0/1/2.VINP7	11	12	ETH1.MDC	PD11
PE22	ADC0/1/2.VINP8	13	14	GND	
PE23	ADC0/1/2.VINP9	15	16	ADC0/1/2.VINP10	PE24
	3.3V	17	18	ETH1.RXD0	PE20
PE18	ETH1.RXD1	19	20	GND	
PE15	ETH1.RXDV	21	22	ETH1.REFCLK	PE16
PD16	PD16	23	24	ETH1.MDIO	PD14
	GND	25	26	ETH1.RST	PD15
	USB1_P	27	28	USB1_N	
PB29	SPI3.CSN	29	30	GND	
PC03	SPI3.MISO	31	32	SPI3.SCLK	PC02



PB30	SPI3.MOSI	33	34	GND	
PD19	PD19	35	36	PD20	PD20
PD23	PD23	37	38	PD24	PD24
	GND	39	40	PD25	PD25

表 2.3: P2 连接器列表



## 第三章 HPM SDK 快速上手指南

## 3.1 简介

HPM SDK (HPM 软件开发套件,以下简称 SDK) 是基于 BSD 3-Clause 许可证,针对 HPM 出品的系列 SoC 底层驱动软件包,提供了 SoC 上所集成 IP 模块底层驱动代码,集成多种中间件与 RTOS。

### 3.2 环境以及依赖

- 使用 sdk\_env 工具
- 手工搭建 SDK 开发环境,具体参考请参考 SDK 目录下 README.md 文件。

## 3.3 开发工具

SDK 支持第三方 IDE 开发,如 Segger Embedded Studio For RISC-V,该 IDE 可以在Segger 官网下载下载 最新版本。

## 3.4 sdk\_env/Segger Embedded Studio For RISC-V 使用快速指南

- 1. 下载安装 Segger Embedded Studio For RISC-V
- 2. 下载的 sdk\_env.zip 解压

Note: 解压目标路径中只可包含英文字母以及下划线,不可包含空格、中文等字符。

3. 运行 sdk\_env\tools\FTDI\_InstallDriver.exe 以安装可用于调试的 FT2232 驱动。





图 3.1: 安装 FTDI 驱动

正确安装驱动后,使用 USB type-C 线缆将 hpm6750evkmini 上的 J4 连接到 PC 后,在 Windows 设备 管理器中应能看到一个 USB Serial Port 以及一个 Dual RS232-HS,如图所示:







4. 双击打开 sdk\_env 下 start\_cmd.cmd,该脚本将打开一个 Windows command prompt (以下将此 Windows cmd prompt 简称为 sdk prompt),如果之前步骤配置正确,将会看到如下类似提示



图 3.3: 打开 sdk prompt

- 5. 在 sdk prompt 中切换路径至 SDK 具体的一个示例程序,以 hello\_world 为例: > cd %HPM\_SDK\_BASE%\samples\hello\_world
- 6. 运行以下命令进行支持目标板查询
  - > generate\_project -list



7. 确认目标板名称后(以 hpm6750evkmini 为例)可以通过运行以下命令进行工程构建,若构建成功,将 看到如下类似提示

>generate\_project -b hpm6750evkmini

$(D:) \rightarrow sdk_env$	
	Name Circa Circa
	C:\WINDOWS\system32\cmd.exe
1	hpm_sok
А	
1	BRADMEm   HPMicro SDK Env Tool
*	Start_cmd.c
	HPM_SDK is found at D:\sdk_env\hpm_sdk Toolchain is found at D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32
	Microsoft Windows [Version 10.0.19042.1415] (c) Microsoft Corporation. All rights reserved.
	D:\sdk_env>generate_project -l hpm6750evk hom6750evkmini
	D:\sdk_env>
sdk_env	- • ×
ols	· · · · · · · · · · · · · · · · · · ·
/	→ V P Search sdk_env
Name	C.\WINDOWS\system32\cmd.exe - X
hpm_sdk	
toolchains	
README.md	HPM_SDK is found at D:\sdk_env\hpm_sdk Toolchain is found at D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32
start_cmd.cm	id in the second se
	Microsoft Windows [Version 10.0.19042.1415]
	(c) Hichosoft comportation. Air i agrics reserved.
	D:\Sdk_env>cd npm_Sdk\samples\nello_world
	D:\sdk_env\hpm_sdk\samples\hello_world>generate_project -b hpm6750evkmini hpm6750evkmini
	Application: D:/sdk_env/hpm_sdk/samples/hello_world Board: hom6756evkmini
	Found toolchain: gnu (D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32)
	The CXX compiler identification is GNU 11.1.0
	The ASM compiler identification is GNU Found assembler: D:/sdk_env/toolchains/rv32imafdc-ilp32d-x86_64-w64-mingw32/bin/riscv32-unknown-elf-gcc.exe
	<ul> <li>Segger linker script: D:/sdk_env/hpm_sdk/soc/HPM6750/toolchains/segger/ram.icf</li> <li>Segger Embedded Studio Project: D:/sdk env/hpm sdk/samples/hello world/hpm6750evkmini build/segger embedded studio/he</li> </ul>
	llo world.emProject
	- Generating done
	build files have been written to: D:/sak_env/npm_sak/samples/nello_world/npmb/sdevkmini_build
	D:\sdk_env\hpm_sdk\samples\hello_world>

图 3.4: 构建目标板工程

Note: generate\_project 可以生成多种工程类型,如 flash\_xip(最后链接完成后的应用中, text 将被链接到 nor flash 地址空间原地执行, data 将被链接到 SoC 片内 RAM 地址空间)



HPM6750
HPM6750EVKMINI

	×	
N	C:\WINDOWS\system32\cmd.exe >	<
Name	^ +-+-+++++++++++++++++++++++++++++++++	^
hpm_sdk toolchains tools README.md	HPM_SDK is found at D:\sdk_env\hpm_sdk Toolchain is found at D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32 Microsoft Windows [Version 10.0.19042.1415] (c) Microsoft Corporation. All rights reserved.	
	D:\sdk_env>cd hpm_sdk\samples\hello_world\	
	<pre>D:\sdk_env\hpm_sdk\samples\hello_world&gt;generate_project -b hpm6750evkmini -t flash_xip hpm6750evkmini - Application: D:/sdk_env/hpm_sdk/samples/hello_world  Bound toolchain: gnu (D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32)  The C Compiler identification is GNU 11.1.0  The CXX compiler identification is GNU 11.1.0  The ASM compiler identification is GNU  Found assembler: D:/sdk_env/hom_sdk/soc/HPM6750/toolchains/segger/flash_xip.icf  Segger linker script: D:/sdk_env/hpm_sdk/soc/HPM6750/toolchains/segger/flash_xip.icf  Segger_mbm6ded Studio Project: D:/sdk_env/hpm_sdk/samples/hello_world/hpm6750evkmini_build/segger_embedded_studio/hu 10_world.emProject  Configuring done</pre>	e
	D:\sdk_env\hpm_sdk\samples\hello_world>	~



- Note: 当调试 flash 目标时,建议把启动配置(具体请参考表 2.1) 拨为在系统编程(ISP)模式,以免 flash 内已烧录的程序对当前调试过程产生影响。
- Note: 更多 generate\_project 使用方法可以通过执行以下命令查看

> generate\_project -h

/	C:\WINDOWS\system32\cmd.exe		
Name hpm_sdk toolchains tools README.md	<pre>HPM_SDK is found at D:\sdk_env\hpm_sdk Toolchain is found at D:\sdk_env\toolchains\rv32imafdc-ilp32d-x86_64-w64-mingw32 Microsoft Windows [Version 10.0.19042.1415] (c) Microsoft Corporation. All rights reserved. D:\sdk_env&gt;generate_project -h generate_project [-f] [-b board] [-a] [-1] [-h] -f: force clean already existed build directory -b board: specify board for project generation -a: generate projects for all supported boards -1: list all supported boards -t type: specify build type: debug/release/flash_xip/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_xip/flash_sdram_xip_release/flash_sdram_sdr</pre>	ease	

图 3.6: generate\_project 帮助

8. 当前目录下将生成名为 hpm6750evkmini\_build 的目录。该目录下 segger\_embedded\_studio 的目录中可找到 Segger Embedded Studio 的工程文件, hello\_world.emProject



hello_world - SEGGER Embedded Stu	idio for R	ISC-V V	5.66 (64	I-bit) - Non-Co	ommercia	l License					-		×
File Edit View Search Navi	gate F	Project	Build	l Debug	Target	Tools	Window	Help					
Project Explorer			×	Empty Dock									×
🕄 Debug 🔹 💽	🗀 🗗	Ð											
Project Items	Code	Data+	RO										
Solution 'hello_world'													
Project 'hello_world'	24.2K		5.4K										
									Dock Here				
				Output								Ø	×
				Show: Transc	ript		- * *	Tasks 💌					ø
				Complete	olution he	ello_work	d.emProject				4 files in 0.0s 4000 files/s		
				Mapping Complete	project in d	formatior	1						
				Complete	solution d	hello_wo	rld'						
				Complete	state from	n previou	s session						
				SEGGER E Complete	mbedded d	Studio is	ready to use						
									Disconnected (GDB Server)	Built OK INS	(No editor	)	

- 图 3.7: Segger Embedded Studio 打开 hello\_world 工程
- 9. 使用 Segger Embedded Studio 打开 hello\_world 工程即可进行编译。

hello_world - SEGGER Embedd	ed Studio for RISC-V V5.66 (64-bit) - Non-Commercial License –	×		
File Edit View Search	Navigate Project Build Debug Target Tools Window Help			
Project Explorer	Build hello_world F7	×		
(2 Patron	Rebuild hello_world Alt+F7			
€. Deoug +	Clean hello_world			
Project Items	Code Data+f Build Solution Shift+F7			
Solution 'hello_world'	24.27 Rebuild Solution Alt+Shift+F7			
> app 1fie	Clean Solution			
boards (2files)	hello_world - SEGGER Embedded Studio for RISC-V V5.66 (64-bit) - Non-Commercial License	-		×
components (1fie)	File Edit View Search Navigate Project Build Debug Target Tools Window Help			
drivers 33 files				¥
b toolchains 3 files				^
totelains	① Debug     ・     □      □			
D Qutput Files	Project Items Code Data+RO			
	Solution 'hello_world'			
	Project 'hello_world' 2428 5.48			
	Dock Here			
	D 🧰 components (11%)			
	b and drivers (33 files)			
	P I COUCHAIRS SHEET			
	Dig Output Files			
	Connt		101	×
			40	
	Show: Transcript 👻 🍾 Tasks 💌			\$
	Building 'hello_world' from solution 'hello_world' in configuration 'Debug' Completed	49 targets in 0.3s 157 targets/s		ок
	Build up to date			
Build the active project and depend	Compreted			
	27.3 KB of 256.0 KB used 10.6% 2.2 KB of 256.0 KB used 0.6%			
	Build up to date Disconnected (GDB Server) 🗳 Built OK 🛛 INS	(No editor)	f	

图 3.8: Segger Embedded Studio 编译 hello\_world 工程

10. 使用 Segger Embedded Studio 进行 hello\_world 调试。





File Edit View Search	Navigate	Draiact							
		Project	Build	Deb	oug Target	Tools	Window	Help	
Project Explorer	×	hello_wo	rld.c h		Go		F5		
1 <sup>2</sup> Dahua		$\leftarrow \rightarrow$			Break		CtrI+.		
₹ <sub>o2</sub> Debug			/*		Stop		Shift+F5		
Project Items Code Da	ata+RO ^		* Сору	←	Restart		Ctrl+Shi	+F5	
Solution 'hellc			*	đħ					
Project 'he 24.4K	5.4K		* SPDX	dini)	loggie Breakp	DINT	F9		
⊿ 🔄 app [80]	[12]	6	*/		Breakpoints			•	
▶ <b>8</b> h 80	12			ΨE	Step Into		F11		
b Board			#includ	6	Step Over		E10		
driver [122.5K]	[3.0K]	10	#includ	ц <u>—</u>	Step Over		FIV		
	[J.OK]			⊊=	Step Out		Shift+F1		
⊳ & h 2.6K			int mai	*3	Run To Cursor		Ctrl+F10		
⊳ <b>⊱</b> h 3.1K			{ int	ξI	Auto Step		Alt+F11		
⊳ 🚰 h 1.0K			boa	Ē	Chow Next Stat	tamant	A 14 + X		
⊳ 🛃 h 3.4K	79			⊈>= (==	Show Next Sta	tement	AIL+"		
Þ 딁 h 328			pri	\$≓	Set Next Staten	nent	Shift+F1		
⊳ 🛃 h 1.7K			wn1 {		Switch Debug	Mode	Ctrl+F11		
⊳ 🛃 h 3.5K	24	20	, i						
▷ 🏭 h 3.4K	435			00	Quick Watch		Shift+F9		
▷ 🚰 h 940					Debug With O		Alt + ES		
▶ <b>8</b> h 584				2	Debug with O	20116	AILTES		
▶ <b>b</b> n 3.5K			}		Options			▶	
	c .		ret		·,				
≥ Elb 33K		<							
▶ ♣] h 528		Output							
⊳ <b>⊱</b> h 8.9K	418	Output							
▶ 📄 h 3.2K	16	Show: T	arget		•	7. 7.	Tasks 🔻		
⊳ 🚰 h 3.1K	272		aring tree	at fo	r dowpload	, ,			
Þ 🛃 h 692		Com	pleted	erio	uownioau				

.....

图 3.9: Segger Embedded Studio 调试 hello\_world 工程

#### 11. 在 Segger Embedded Studio 中配置串口





12. 在 Segger Embedded Studio 中打开串口



🧼 hell	b_world	- SEGGER	Embed	Ided Studio	for RISC-\	/ V5.66 (6	i4-bit) - Non-O	ommercia	Licen	se (Stoppe	ed)									_	٥	>	ĸ
File	Edit	View	Search	Navigat	e Proje	ect Bu	ild Debug	Target	Too	ls Wind	dow	Help		_									
Projec	t Explore			🤹 🗙	hello	_world.c	hpm_uart_c	irv.c	۵	Options			Alt+,			*	×	Locals	5	<b></b>	🖏 🌡	ão.	×
ی De	bug			-	🄶 in	t main()				License M	lanager			+3	00	¢≣	<u>,</u>	X <sub>2</sub> X <sub>8</sub>	×10	$\times_{16}$	×±10	'×'	+
Project Sol A D	Items ution 'he Project app b &	Coc tille The h arc np	1e [ 24.4K [80] 80	5.4K [12] 12	×	/*  * (  *  *  *  *  *  *  *	Copyright ( SPDX-License clude <stdiv clude "board</stdiv 	c) 2021 H e-Identif o.h> d.h"	*δ	Package N Show Inst Manually New File ( New Binat	Manage talled P Install I Compar ry File C	r ackages Packages rison Comparison	Ctrl+K, F				^	Expressio u	n	Va Øx	lue 0000	0008	
-		rer (12 h h h h h	672 2.6K 3.1K 1.0K 3.4K 328	(3.0K) 79	¢ •	int 13 {	<pre>main(void) int u; board_init printf("he. while(1)</pre>	(); llo world	i\n");	Terminal E Admin	Emulato	)r	•		Conn Disco	ect CO nnect	ulator M4 (11	5200, N, 8, 1)	Ctr	I+Alt+	M		>
		h h h h h h h	1.7K 3.5K 3.4K 940 584 3.5K 2.7K 2.9K 2.9K	24 435 5	< Cutp Show Show Show Show Show Show Show Show	ut Target Preparing Complete Erasing 'P Erase suc	targel d nello_w 27.6 K cessful 220.8	B in 0.1s KB/s	) 7. 7	e × Tasi	Call S Functi int vo sta	ion t main() id reset_har	ndler()	đ	Baud Parity Data I Stop I Prope	Rate Bits Bits erties	04C		a 0	×0000	) ) ) 1f7c	<b>−</b> →	×
Refere	nces			<b>*</b> ×		Downloa Downloa	ding 'h 27.6 K d succe 52.0 K	<b>B in 0.5s</b> B/s		ОК	_st	tart()			0)	x00000	000		p 0. p 0.	x0000 x0000	fff0 0884		

图 3.11: Segger Embedded Studio 打开串口

#### 13. 运行 hello\_world

sject Explorer	🗖 🕄 🗙	(hello_world.c) hpm_uart_drx.c	~
Debug 🗸 🗖 🦳 🖽 🗘 🌾	18 V 0	🗣 int main() 🔹 🔹 🔹 🗘 👘 🖓 🗐 🖓 🗐 🖓	00 🖓
ect items	Code Data+RO	/* * Converget (c) 2021 howiero	
Popp     Poppp     Poppp     Poppp     Popp     Popp     Popp     Popp     Popp	80 12	copyright (c) zozi njinici o	
b boards 2fies	00 12	SPDX-License-Identifier: BSD-3-Clause	
components 1fie			
a 🔄 drivers (33 files)	(76.4K) (1.5K)		
hpm_acmp_drv.c	672	#include <stdio.h></stdio.h>	
hpm_adc12_drx.c	2.6K	Binclude "board.h"	
hpm_adc16_drv.c	3.1K	to enclose hereose consistent	
hpm_cam_drv.c	1.0K	int main(void)	
hpm_can_drv.c	3.4K 79		
hpm_dao_drv.c	328	int u;	
hpm_dma_drv.c	1.7K	board_init();	
hpm_dram_drv.c	3.5K 24	<pre>printf("hello world\n");</pre>	
hpm_enet_drv.c	3.4K 435	while(1)	
▷ & hpm_gpio_drv.c	940	19 { u = setebar()	
hpm_gptmr_drv.c	584	if (u = c)	
hpm_i2c_drv.c	3.5K	u = t\n';	
hpm_i2s_drv.c	2.7K	}	
hpm_jpeg_drv.c	2.9K 5	<pre>     printf("%c", u); </pre>	
▷ Sel hpm_lcdc_drv.c	5.5K	J return 0:	
b Build up and a start star	528		
b Bill hom_poma_orve	0.9K 410		
b Sel npm_prict_orv.c	2.4K 10	(Terminal Emulator) 🖸 🎘 🗿 📴 🗙 Call Stack	25
b D hom new dryc	607		
b D hom num druc	2.24	2 3 G <sup>1</sup>	
b bom ma dryc	772	Function	Call Ad
b & hom the druc	308	int main()	0x0000
All hom sdp dry.c	6.7K 341	\$\$\ \$\$\$\$\$\$\$\$\$ \$\$\ \$\$\ void reset_handler()	0x0000
b & hpm_sdxc_dru.c	9.1K 4	35         35	0x0000
b & hpm spi drv.c	3.5K	\$	0x0000
hpm_uart_drv.c	1.6K 20 🗸	\$\$ _\$\$ \$\$\$\$ \$\$\$ \$\$\$ \$\$ \$\$ \$\$ \$\$ \$\$	
		\$\$ \$\$ \$\$ \$\$ \$\$ \\$ /\$\$ \$\$ \$\$ \$\$ \$\$ \$\$ \$\$	
erences	<b>~</b> ×	25   25   25   25   27   27   27   27	
rch within results			
		hello world	
A Draw Mark >	Replace		

图 3.12: Segger Embedded Studio 运行 hello\_world



## 3.5 更新 sdk\_env 中的 SDK/toolchain 指南

在这一部分将说明如何更新 sdk\_env 中的 SDK 以及 toolchain

### 3.5.1 更新 sdk\_env 中的 SDK

>

- 1. 下载的 hpm\_sdk.zip
- 2. 将解压后的 hpm\_sdk 放至 sdk\_env 目录下,确保可以在 sdk\_env\hpm\_sdk\ 目录中可以找到 env.cmd

sdk_env	v > hpm_sdk >	
	Name	1
* * *	Name arch boards cmake components docs drivers middleware samples scripts scc utils checkpatch.conf gitignore gitignore gitighore gitlab-ci.yml CMakeLists.txt env.cmd env.sh LICENSE README.md	
	VERSION	

图 3.13: 更新 SDK

### 3.5.2 更新 sdk\_env 中的 toolchain

- 1. 下载 toolchain(以 rv32imafdc-ilp32d-x86\_64-w64-mingw32.zip 为例)
- 2. 将解压后的 toolchain 放至 sdk\_env\toolchains\ 目录下,确保可以在 sdk\_env\toolchains\rv32imafdcilp32d-x86\_64-w64-mingw32 目录中可以找到 bin 文件夹



sdk_env	> toolchains >	
	Name	~
* * *	README.md	

图 3.14: 拷贝 toolchain

3. 编辑 start\_cmd.cmd,更新环境变量 TOOLCHAIN\_NAME

v	
Data (D:) > sdk_env >	istart_cmd.cmd - Notepad File Edit Format View Help
Name hpm_sdk toolchains tools README.md	<pre>@echo off setlocal enabledelayedexpansion @rem Please modify the following variable set TOOLCHAIN NAME=TO BE UPDATED set HPM_SDK_BASE=%~dp0hpm_sdk</pre>
View	Contract and and Material
C → Data (D:) → sdk_env → to	volchains File Edit Format View Help
Na * * * *	<pre>me @echo off setlocal enabledelayedexpansion rv32imafdc-ii README.md @rem Please modify the following variable set TOOLCHAIN_NAME=rv32imafdc-i1p32d-x86_64-w64-mingw32 set HPM_SDK_BASE=%~dp0hpm_sdk   @rem Normally the following variables don't need to be updated set PATH=%~dp0tools\cmake\bin;%~dp0tools\python3;%~dp0tools\Python3\Scr set PYTHONPATH=%~dp0tools\Python3\Lib\site-packages set GNURISCV_TOOLCHAIN_VARIANT= set OPENOCD_SCRIPTS=%HPM_SDK_BASE%\boards\openocd</pre>

图 3.15: 更新 start\_cmd.cmd 中 TOOLCHAIN\_NAME



## 第四章 RT-Thread Studio 快速上手指南

## 4.1 简介

本章基于 HPM6750EVKMINI 开发板简要介绍 RT-Thread Studio 的快速上手步骤。

## 4.2 环境以及依赖

用户需要在 RT-Thread Studio 中安装如下包来使能对 HPM6750EVKMINI 软件开发的支持。

- 板级支持包 (Board Support Package)
- 编译器工具链 (Toolchain Support Package )
- 调试器支持包 (Debugger Support Package)。

## 4.2.1 安装板级支持包

点击如下图红色圈出"SDK Manager"图标,在弹出的窗口中找到"Board\_Support\_Packages",并在项的 子菜单下面找到"HPMicro",选中 HPM6750EVKMINI,点击"Install 1 packages"完成安装。

workspace - blink_led/applications/n	nain.c - RT-Th	read Studio			
<u>File Edit Source Navigate Project</u>	t <u>R</u> un <u>W</u> in	idow <u>H</u> elp			
🖻 🕶 🔡 🐚 💊 🕶 🗞 💌 🕸 🗶 🙋	🤌 👻 🕒 🤇	» 🕭 🕶 🗟 🗇 🕶	⇔ ▼		
Project Explorer 🛛 🗖 🗖	li main.c ≥	3 sontext_gcc.S			
		aine o coceio	C+117		~
RI-Thread SDK Manager				- U	~
Operations					
Resource Library					
Name	Size	Status	Description		
> 🗌 🐸 ES-PDS-ES32F0654		Not installed			
> 🗌 🐸 ES-PDS-ES32F369X		Not installed			
<ul> <li>         —</li></ul>					
> 🗌 🐸 n32g45xvl-stb		Not installed			
✓ □ Renesas					
> 🗌 🐸 CPK-RA6M4		Not installed			
V I Nuvoton					
> 🗌 🐸 NUMAKER-PFM-M48		Not installed			
> 🗌 🐸 NUMAKER-M2354		Not installed			
> 🗌 🐸 NUMAKER-IOT-M487		Not installed			
> 🗌 🐸 NUMAKER-M032KI		Not installed			
🗸 🗌 🐸 Other					
> 🗌 🐸 BLANK-PROJECT-TEN		Not installed			
✓ → HPMicro					
> 🗌 🐸 HPM6750EVKMINI		Installed			
V 0 % ToolChain_Support_Packag			RT-Thread Studio ToolChain Support Packages		1.1
> 🗌 🐸 GNU_Tools_for_ARM_En		Installed			- 11
> 🗌 🐸 RISC-V-GCC		Installed			
> 🗌 🐸 ARM-LINUX-MUSLEABI		Not installed			
> 🗌 🐸 RISC-V-GCC-WCH		Not installed			
			Install packages	Delete package	es
Resource pack imported successfully				Show	Log

图 4.1: 安装 HPM6750EVKMINI 板级支持包

## 4.2.2 安装编译器工具链

点击如下图红色圈出"SDK Manager"图标,在弹出的窗口中找到"Toolchain\_Support\_Packages",并在项的子菜单下面找到"RISC-V GCC",选中最新的版本,如"10.1.0",点击"Install 1 packages"完成安装。

Projec 🛛 🔁 Navig 🗖 🗖				
RT-Thread SDK Manager			-	- 🗆 X
perations				
Resource Library				
Name	Size	Status	Description	
> 🗌 🐸 NUMAKER-IOT-M487		Not installed		
> 🗌 🐸 NUMAKER-M032KI		Not installed		
🗸 🔲 🐸 Other				
> 🗍 🐸 BLANK-PROJECT-TEN		Not installed		
✓ □ № HPMicro				
> 🗌 🐸 HPM6750EVKMINI		Installed		
<ul> <li>ToolChain_Support_Packag</li> </ul>			RT-Thread Studio ToolChain Support Packages	
>		Installed		
🗸 🔽 🐸 RISC-V-GCC				
🛃 🕀 10.1.0 (2020-09-10)	80.7 MB	Not installed	released v10.1.0	
> 🗌 🐸 ARM-LINUX-MUSLEABI		Not installed		
> > BISC-V-GCC-WCH		Not installed		
> > > BISC-V-GCC-KENDRYTE		Not installed		
✓ □ ☆ Debugger_Support_Packag			RT-Thread Studio Debugger Support Packages	
> 🔲 🐸 J-Link		Installed		
> > > > ST-LINK_Debugger		Installed		
> 🔲 🐸 PyOCD		Installed		
> 🔲 🐸 QEMU		Installed		
> 🗍 🐸 OpenOCD-KENDRYTE		Not installed		
> > > WCH-LINK_Debugger		Not installed		
			Install 1 packages	elete packages

图 4.2: 安装 RISC-V GCC 工具链

## 4.2.3 安装调试器支持包

点击如下图红色圈出"SDK Manager"图标,在弹出的窗口中找到"Debugger\_Support\_Packages",并在 项的子菜单下面找到"OpenOCD-HPMicro",选中最新的版本,如"0.1.0",点击"Install 1 packages"完成安装。 安装完调试器支持包后,用户可从 RT-Thread Studio 安装目录下的"repo/Extract/Debugger\_Support\_Packages/HPMicro/Oper HPMicro/<version>/tool"目录下找到"FTDI\_InstallDriver.exe",双击该应用程序完成驱动的安装。



ojec 🛛 🔽 Navig				
RT-Thread SDK Manager			- 0	×
perations				
esource Library				
Name	Size	Status	Description	
> 🗍 🐸 HPM6750EVKMINI		Installed	<b>-</b>	
ToolChain_Support_Packages			RT-Thread Studio ToolChain Support Packages	
>    GNU_Tools_for_ARM_Embedded	Pro	Installed		
✓ □ № RISC-V-GCC				
	80.7 MB	Not installed	released v10.1.0	
> > > > ARM-LINUX-MUSLEABI		Not installed		
> > > BISC-V-GCC-WCH		Not installed		
> > > BISC-V-GCC-KENDRYTE		Not installed		
/ - The provide the provided and the			RT-Thread Studio Debugger Support Packages	
🗧 🖂 🐸 J-Link		Installed		
> > > B ST-LINK_Debugger		Installed		
> 🔲 🐸 PyOCD		Installed		
> 🗌 🐸 QEMU		Installed		
> 📃 🐸 OpenOCD-KENDRYTE		Not installed		
> 🗌 🐸 WCH-LINK_Debugger		Not installed		
> DenOCD-Nuvoton		Not installed		
🗸 🔽 🗁 OpenOCD-HPMicro		A		- 1
	9 MB	Not installed	Initial OpenOCD-HPMicro Debugger Support	- 1
⊕ 0.1.0 (2021-01-17)				

图 4.3: 安装 OpenOCD-HPMicro 调试器支持包

## 4.3 新建工程

在 Project Explorer 空白处点击鼠标右键, 在弹出的菜单中依次点击" New"->" Project", 选中" RT-Thread Project", 再点击 Next, 在弹出的窗口中选中"Based On Board", 出弹出如下窗口。填入工程的名称, 如"blink\_led", 点击" Finish" 完成工程的创建。

🙀 workspace - RT-Thread Studio				- • ×		
File Edit Source Navigate Project Run Window Help						
😁 = 🗟 🖏 = 5 % 💷 🕸 🔌 = (속) 💆 = 🗟 (수) = 0 =			Quick Acces	😰 🗟 C/C++ 🇯 Debug		
🍋 Projec 🛙 📽 Navig 🐡 🗖				2 O_ 2 @ B		
E 🕏 🔻				22		
				An outline is not available.		
New Project -		R HPM6750EVKMINI Board Infor	mation		×	
Create RT-Thread Project	<u> </u>	Board Price: 35.00 USD	🐺 Buy	Mcu on Board: HPM6750	O Board Repository	
Input project name, choose RT-Thread version and select one Board and choose			HPM6750EVKN	INI is a development board based on the l	RISC-V core launched by HPMicro, with rich	
template or example.		simulta - secondid IS	on-board resou	rces and on-chip resources for Display, Au	idio and motor control applications.	
Project name: blink_led		101	Features:			
Use default location			MCU: HPM6750, main frequency 816MHz, 2MBytes SRAM			
Location: C:\Users\hpm15\Downloads\RT-ThreadStudio\workspace\blink_led	Browse		RGB LEDs			
			On-Board 16	MBytesQSPI FLASH , On-Board 16MBytes	s 16-bit SDRAM	
Base On MCU     Base On Board			Buttons: 3. R	ESET, WBUTN, PBUTN		
			Debug Inter	ace: On-board FT2232		
Develo UDMCTOD/MUNI			On-board Si	1 WIEI- RW007		
Board . In Mid Societ Kining		and a second from a				
BSP: 0.2.3(offline)	~	a manual				
		* manual				
Type : Template	~	HPM6750EVKMINI	_UG_2021122	9 HPM6750-EVK-MINI快速上手指南		
		+ sheet				
RI-Inread: 4.0.4		HPM6750_Fact_She	et_V1_0 HPM6	750 Datasheet		
Adapter: FT2232 Y Port: JTAG	~					
(?) < Back Next > Finish	Cancel					

图 4.4: 创建新的 RT-Thread 工程

## 4.4 编译和调试



#### 4.4.1 编译

点击如下图所示的编译图标,完成 blink\_led 工程的编译。

🜪 workspace - RT-Thread Studio							
File Edit S	ource	Navigate	Project	Run	Window	Help	
📑 🗕 🖬	<b>% -</b> 5	s 🔊 📃 🛛	* 🔺 😕	1	• 🖢 🧇	i 🖥 i 🗇 🔹	- 🗘 -
Projec 🛛	Build 'D	Debug' for	project 'b	link_le	d.		
> 🔂 blink_le	d		▽				

图 4.5: 编译新的 RT-Thread 工程

#### 4.4.2 调试

- 1. 将板子 BOOT PIN 调到 BT0: ON, BT1:OFF 的位置
- 2. 将 USB TypeC 线的 C 口插入到板子的 "PWR DEBUG" 端口, A 口插入到电脑的 USB 口。当板子的 LED7 (三色灯)亮起时,说明 USB 连接正常。
- 3. 打开支持终端的串口助手,如 putty 或者 MobaXterm,连接板载的 USB 转串口端口。
- 4. 按"Ctrl + F5"或者点击编译新 RT-Thread 工程所示的虫子图标,程序会停在 main 函数入口处,同时 串口终端会打印如下内容:



#### 图 4.6: RT-Thread 启动信息

5. 按 F5 或者下图所示的图标记程序继续执行,此时,板载 RGB LED 灯会依次闪烁。





🙀 workspace - blink_led/applications/main.c - RT-Thread Studio — 🛛 🛛 🗙						
Eile Edit Source Navigate Project Run Window Help						
🗂 🕶 🔤 🐚   🍜 🔨 💌 🗯 🥙 🔗 💌 📮 🕪 🗉 🖷 🕅 🕱 🧐 🖄 🖬 🖘 😒   🕹 💆 🕶 😓 👻 Quick Access   😰   🗟 C/C++ 🌞 Debug						
🇯 Debug 🛛 🏠 Project 👘 🗖	🖻 mai. Resume (F5) ext_gcc.S	(x)=V 🖾 💁 B б№ E 🔓 P 🍡 🗖 🗖				
<ul> <li>blink_led.OpenOCD.Debug [GI</li> <li>ftthread.elf</li> <li>fmain() at main.c:21 0;</li> <li>openocd.exe</li> <li>riscv64-unknown-elf-gdb</li> </ul>	<pre>12 #include "board.h" 13 14 void thread_entry(void *arg); 15 16 17 18* int main(void) 19 { 20 21 board_init_led_pins(); 22 23 static uint32_t thread0_arg = 0; 24 rt_thread_t thread0 = rt_thread_crea 25 rt_thread_startup(thread0); 26 27 return 0; 28 } 29</pre>	Image: Second secon				
	30	Ψ				
		4				
	🖻 Console 🛛 🕵 Problems 📀 Executables 🖉 Terminal 📓 Debugger	Console 🚺 Memory				
	blink_led.OpenOCD.Debug [GDB OpenOCD Debugging] openocd.exe Info : JTAG tap: hpm6750.cpu tap/device found: 0x1000 Info : datacount=4 progbufsize=8 Info : Examined RISC-V core; found 2 harts	%   R a @ @ @ @ a • * * * 563d (mfg: 0x31e (Andes Tec				
	Writable Smart Insert 21:14					

图 4.7: 运行 RT-Thread 工程

## 4.5 已知限制/问题

• 当前仅支持 RAM 下载和调试。FLASH 的下载和调试会在后续提供。



# 第五章 版本信息

日期	版本	描述
Rev0.1	2022/01/04	内部版初版发布。
Rev0.2	2022/01/18	增加 RT-Thread Studio 快速上手指南章节
Rev0.3	2022/01/25	更改 HPM SDK 快速上手指南章节名称,更换 FTDI 驱动安装截图
		(winusb)。

表 5.1: 版本信息

## 第六章 免责声明

上海先楫半导体科技有限公司(以下简称:"先楫")保留随时更改、更正、增强、修改先楫半导体产品和/或 本文档的权利,恕不另行通知。用户可在先楫官方网站 https://www.hpmicro.com 获取最新相关信息。 本声明中的信息取代并替换先前版本中声明的信息。